


Installation of BioRowTech system on ergometer



Mount the seat position sensor between foot-plates of the stretcher using the supplied mounting tape. Connect the sensor to the bottom of the seat, so that the wire should be parallel to the travel of the seat.



Mounts the handle position sensor on the frame of the erg, and connect the wire with the handle using Velcro strip. The wire should be approximately parallel to the chain.

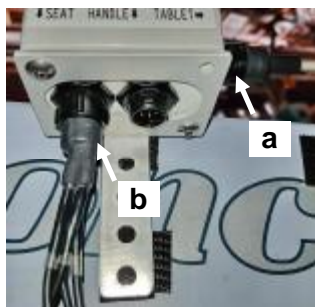

Mount the electronic unit to the frame and connect cables:

Computer cable – to (a) socket;

Sensors cable – to (b) socket



Mount the trunk position sensor (a) on the vertical arm of the erg using the supplied mounting tape. Connect the wire of the sensor with athlete's clothes at the level of the shoulders.

Mount the tablet PC (b) at the middle of the vertical arm using the supplied mounting tape. Turn the PC ON and connect the cable to micro-USB socket.

To start the program, double click on BioRowTech icon. To see the desktop on the tablet with Windows 10, you may need to switch OFF "tablet mode" (gesture from the right edge, switch off the button "tablet mode").



To start, using the program, click "Ergometer" button at the top toolbar.